Multifunctional Fascia gun

User Manual

Maintenance

1. Wipe the surface of the equipment with a little wet towel and dry it with soft cloth.
2. Please charge the battery fully and take the equipment back to the original packaging place when storing for a long time.
3. When the equipment is running for one hour, please turn it off for half an hour and then open it again to continue to use it.

Disclaimer

Please read the user manual in details before using the equipment, and use the equipment correctly in accordance with user manual.Our company will not take the responsibility for any loss or damage users made if the user cannot use the equipment in accordance with the user manual.

Don’t use the high-speed level without any permission from doctors under the following conditions.

1. Pregnancy, diabetes and complications such as neuropathy or mask damage, pacemaker wear, recent surgery, epilepsy or migraine, disc herniation, loosening or spondylitis.
2. Recently, joint replacement or IUD had been made, or there had been the problem with the health. Weak adult and children need to use this device with caution. They should be accompanied by healthy adults.

These contraindications don’t mean that you could not use this equipment. We suggest that you consult the doctor first, and then use it under the permission of the doctor. We are studying the impact of the equipment on specific medical disease, which lead to the non-comprehensive contraindications mentioned above.And please use it under the guidance of doctors if you had any contraindications mentioned above.

Table of content

Product brief introduction.....01

Function brief introduction.....02

The introduction of massaging the head.....03

The instruction of battery.....04

Safety precautions and warning instructions.....04

Disclaimer.....06

Maintenance.....07

Product introduction

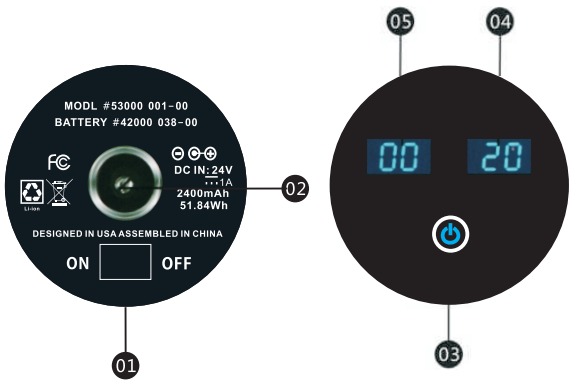

The description of product parts			
Serial no.	Name	Serial no.	Name
01	Power switch	02	Charging socket
03	Gear plus key	04	Battery indicator
05	Gear indicator (1-6 level)		

8. Do not discard or misuse this equipment
9. Only use original charger to charge the battery
10. Do not permit to use this equipment when charging
11. Please check whether it is normal before using it

Warning:
Keep the equipment away from liquid, heating device or fire
Prohibit from disassembly and modification of this equipment privately
If had any hurt in your body,please prohibit from using this equipment without doctors’ permission

Safety precautions and warning instructions

In order to reduce the risks, such as electronic shock,fire or damage of human body, please make sure to make following instructions:

1. Only permitting adults to use
2. This equipment cannot be massaged directly on the surface of skin, please make sure to use it with matching and suitable massage head, in order to avoid damaging the skin, and it cannot be beyond the 60 second for the same part
3. Use the high-speed level and pressurized use only for any soft tissue part under the condition of not producing hurts and any discomforts and not permit to use it for head and any part of body;
4. Please choose the suitable massage head in accordance with massaging needs of different parts of the body
5. It will cause scratch by using the high-speed level and high-pressure level, if had any pains and discomforts, please stop using it immediately
6. Your finger, hair or any hair in your whole body should be kept away from equipment telescopic rod in order to prevent from hurt
7. This equipment is not water-proof, please make sure not touch the water for it.

Function brief introduction

Charging socket	Please charge this battery fully when you use it for the first time. Please use the original charger for it. Please make sure that the equipment is not under the working condition when charging!
Power switch	The equipment is on the power on when the power switch is dialed to the left(ON) and it will be on the off state when the power switch is dialed to the right (OFF)
Gear plus key	Click once to increase one level of gear
Battery indicator	Display the power amount at that time Please make sure that the equipment is not on the working state when charging!
Gear indicator	The gear level 1: 1200 RPM The gear level 2: 1600 RPM The gear level 3: 2000 RPM The gear level 4: 2400 RPM The gear level 5: 2800 RPM The gear level 6: 3200 RPM Please choose the gear level carefully because it may be accidentally injured!

The introduction for massage head

This equipment is only with 4 massage heads and taken care for every muscle group

Picture	Name	Massaging effect
	50mm sphere-typed head	Suitable for massaging large muscle groups such as the neck and spine, arms, and thighs
	Y-typed head	Suitable for massaging neck and spine
	crew cut	Suitable for relaxation and shape for every muscle parts
	A-typed head	Suitable for every muscle parts such as meridians, joints, palms and soles

The instruction of battery

This equipment is equipped with 24V/12V(1200mAH - 2600mAH) (optional)lithium-ion battery, safe and reliable, and can keep working at the lowest gear for 8 hours.

It can be charged fully after charging 1.5-3 hours when the battery is completely used up.

Please make sure to shut down the power supply in time every time you use up.

It will automatically stop once after you continuously use it for 10 minutes and it is needed to open the gear again if you continue to work

The battery of this equipment cannot be disassembled! If you need to change the battery,please contact with the local dealer!